



Data is free-running on COM port. Column 1 is raw sensor voltage, column 2 is pca temperature, and column 3 is pca supply voltage. The temperature and supply voltage may be deselected so that only the sensor voltage is reported. COM port configuration is detailed at the end of this document.

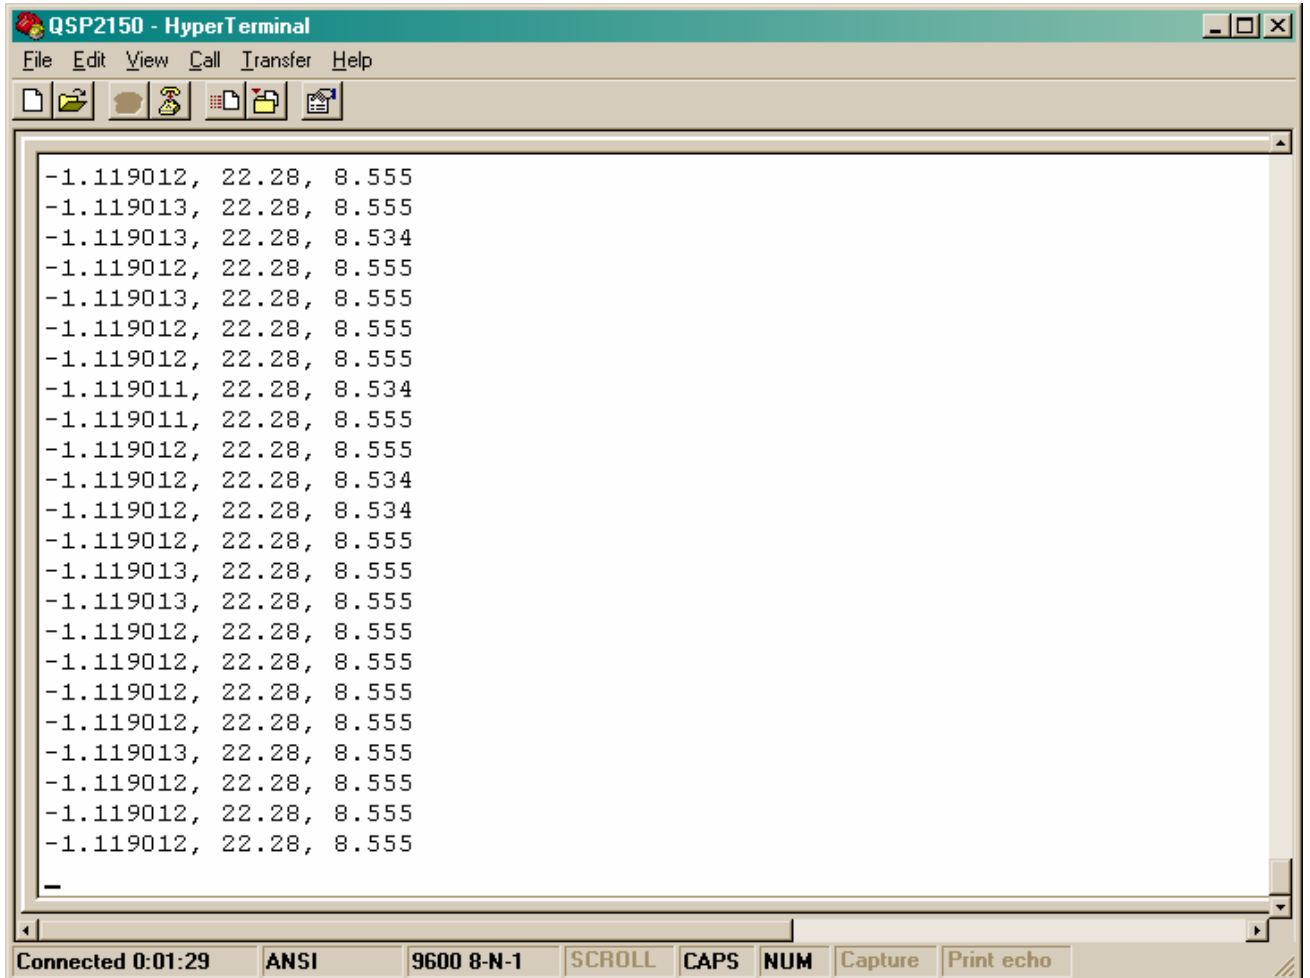

```
QSP2150 - HyperTerminal
File Edit View Call Transfer Help
-1.119012, 22.28, 8.555
-1.119013, 22.28, 8.555
-1.119013, 22.28, 8.534
-1.119012, 22.28, 8.555
-1.119013, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119011, 22.28, 8.534
-1.119011, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.534
-1.119012, 22.28, 8.534
-1.119012, 22.28, 8.555
-1.119013, 22.28, 8.555
-1.119013, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119013, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
-1.119012, 22.28, 8.555
Connected 0:01:29 ANSI 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
```


Hyperterminal Configuration:

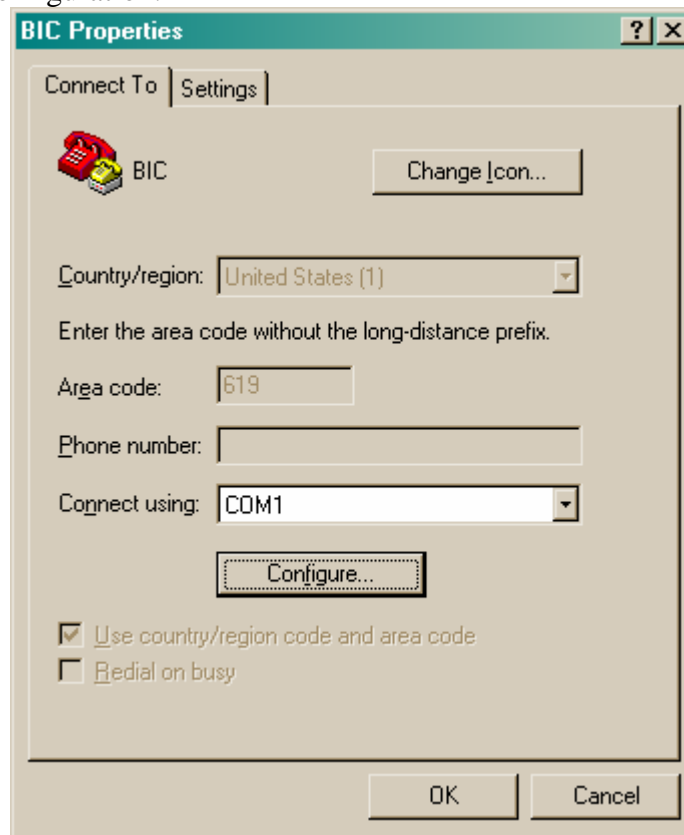

The screenshot shows the "BIC Properties" dialog box with the "Settings" tab selected. It features a "Connect To" section with a "BIC" icon and a "Change |con..." button. Below this, there are fields for "Country/region" (set to "United States (1)"), "Area code" (set to "619"), and "Phone number" (empty). The "Connect using" dropdown is set to "COM1". A "Configure..." button is located below these fields. At the bottom, there are two checkboxes: "Use country/region code and area code" (checked) and "Redial on busy" (unchecked). The "OK" and "Cancel" buttons are at the very bottom.

BIC Properties [?] [X]

Connect To | Settings

 BIC Change |con...

Country/region: United States (1)

Enter the area code without the long-distance prefix.

Area code: 619


Phone number:

Connect using: COM1

Configure...

Use country/region code and area code
 Redial on busy

OK Cancel

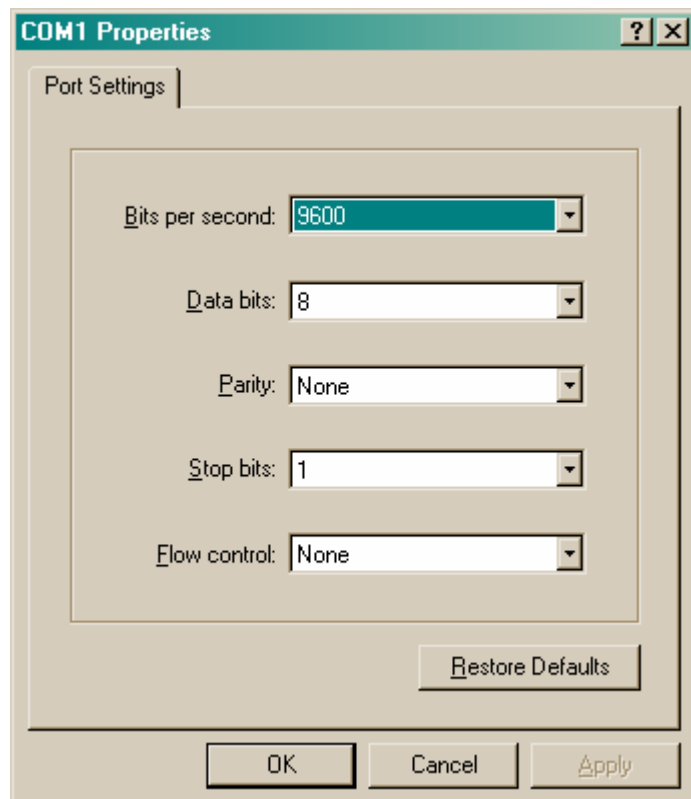

The screenshot shows the "COM1 Properties" dialog box with the "Port Settings" tab selected. It contains five dropdown menus: "Bits per second" (set to "9600"), "Data bits" (set to "8"), "Parity" (set to "None"), "Stop bits" (set to "1"), and "Flow control" (set to "None"). A "Restore Defaults" button is located at the bottom right of the settings area. The "OK", "Cancel", and "Apply" buttons are at the very bottom.

COM1 Properties [?] [X]

Port Settings

Bits per second: 9600

Data bits: 8

Parity: None

Stop bits: 1

Flow control: None

Restore Defaults

OK Cancel Apply

